

TURNING UNIT



FABER

TURN

YOUR FLASKS OVER AT PRICE WHICH WILL KNOCK YOU OVER.

You currently have to :

- guarantee there are no foreign bodies in the empty flasks,
- clean, drain and rinse or dry the containers,
- disinfect or steam sterilise,
- remove any non-standard contents,
- mark the bottom of the containers,
- straighten up or position products on their most stable base,
- mix the contents,
- label the product the wrong way up.

THE SOLUTION : THE FABER ONE-PIECE TURNING UNIT.

The FABER turning unit is a static item. It is easily adapted to new or existing continuous process lines. Turning over is carried out using the pressure of flasks accumulated further up the turning unit. If the pressure is insufficient we can supply a driving device as shown on page 4. Depending on circumstances, our turning units are placed directly above, alongside or at the end of your conveyor.

Only FABER offers and guarantees in 1 turning unit turning over followed by a straight working area and then straightening up of the flasks.

The inside of the turning unit is accessible for easy maintenance.

Our items are made in nylon or acetal food material ; other materials on request.

We will be happy to undertake a feasibility study based on drawings or flasks.

CLEANING

STERILISING

CONTROLLING




DRAINING

MIXING


BLOWING

CODING

RINSING

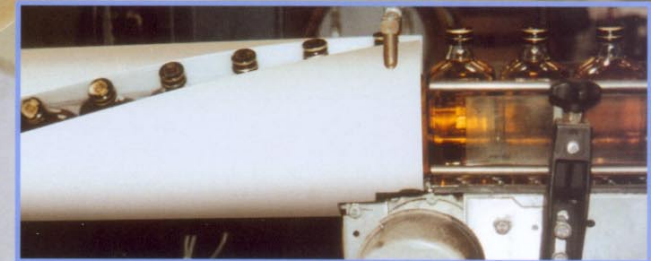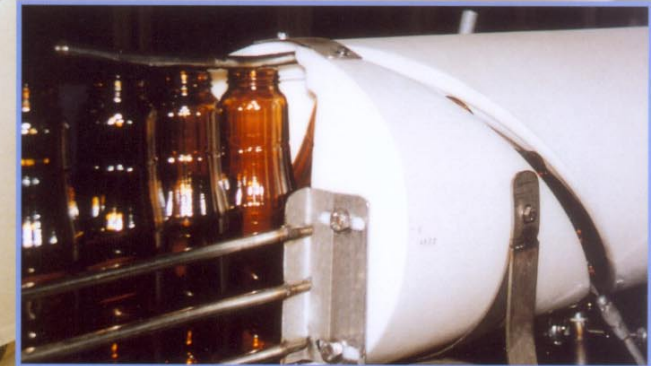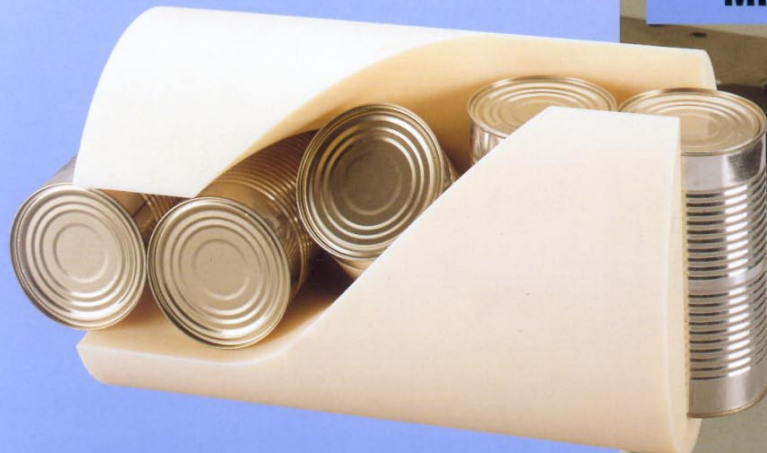

A few examples of manipulation :

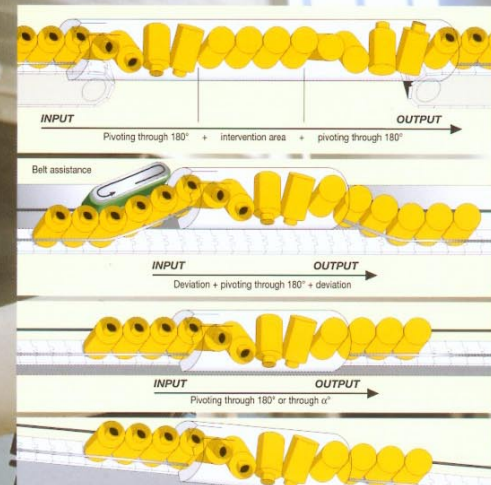

FABER

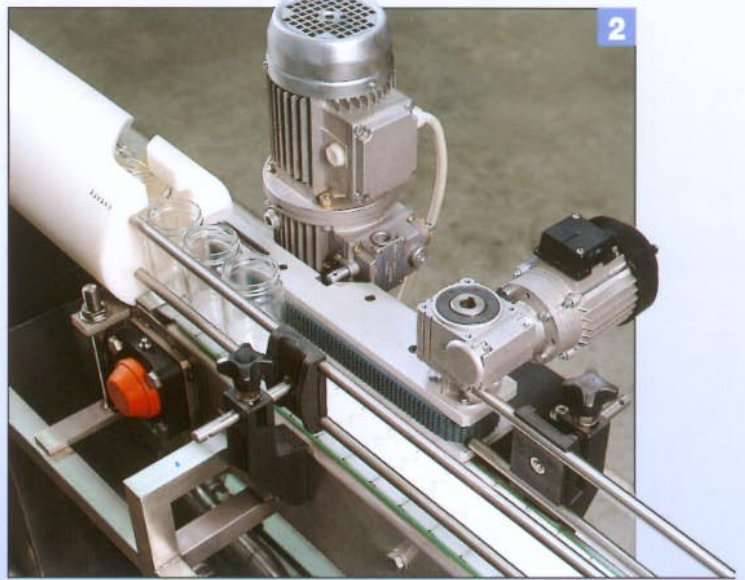
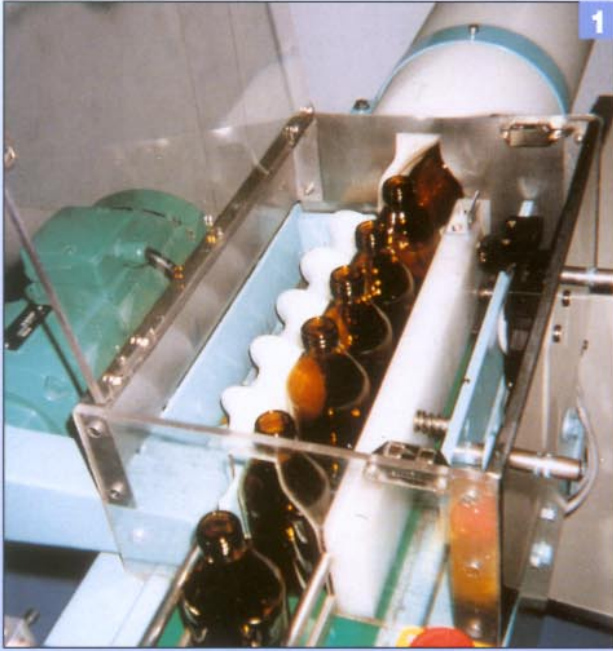


Photo : Antoine Perigot



Photo : Studio Thierry Dugas



Photo : France Europe photo



Photo : Jean Lenrouilly



B.P. 321 - F-08202 SEDAN CEDEX - Tel. : (33) 3.24.27.03.29 - Fax : (33) 3.24.27.51.66
DELIVERY ADDRESS : Z.I. - F-08140 BAZEILLES